

# Installation Instructions

## Vinyl Signs

[www.wheelierubbishsigns.co.uk](http://www.wheelierubbishsigns.co.uk)  
[info@wheelierubbishsigns.co.uk](mailto:info@wheelierubbishsigns.co.uk)

Whitehouse Farm, Earthcott Green  
Alveston, Bristol BS35 3TE





### Step 1 - CLEAN

Using a mild detergent and cloth thoroughly clean the area you wish to apply the vinyl label.

### Step 2 - Align Label

Locate the supplied label (Note: protective films should not be removed yet). Using small strips of sticky tape approximately 1" to 2" long tack top edge of sign in place to bin and align to bin (note tape act as a temporary hinge).

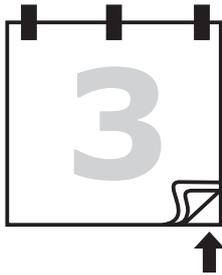
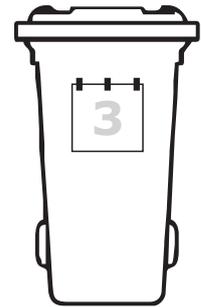


### Step 3 - Remove Backing

Hinge the label up and remove the entire backing layer revealing the adhesive vinyl (i.e. remove back most layer).

### Step 4 - Attach Vinyl

Slowly allow label to drape onto bin surface; simultaneously use your hand (or a squeegee) to apply pressure on the label surface as it comes into contact with the bin (working downwards).

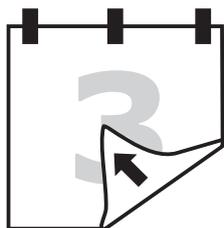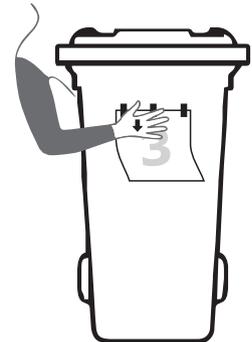

### Step 5 - Remove Transfer Film

Working from a bottom corner, peel off the transfer film at approx 180 degrees (i.e. pull back on itself) to reveal the COMPLETED LABEL.